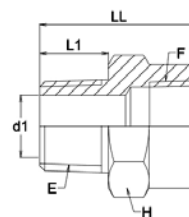
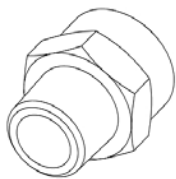
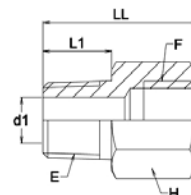
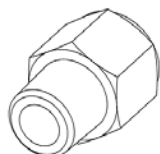


Adapteur droit Mâle GAZ Conique X Femelle NPT

S MR X FNPT

PT178	R (E)	NPT (F)	L1	LL	d1	H				
1GR24050	R1/4-19f	3/8-18f	14	33,5	7	22				
1GR17050	R3/8-19f (C)	1/8-27f	15	22	8,3	17				
1GR19060	R3/8-19f (C)	1/4-18f	15	23	10,7	19				
1GR24070	R3/8-19f	3/8-18f	15	33	10	22				
1GR22070	R1/2-14f (C)	1/8-27f	19	27	8,3	22				
1GR22080	R1/2-14f (C)	1/4-18f	19	27	13	22				
1GR29090	R1/2-14f	1/2-14f	19	44	13	30				
1GR36100	R3/4-14f	3/4-14f	20	45	18	36				
1GR46110	R1"-11f	1"-11,5f	24	55	24	41				

(C) Concentrique.

Adapteur droit Mâle GAZ Conique X Femelle ISO / Agricole

S MR X FISO / FARM

PT161	R (E)	ISO (F)	L1	LL	d1	H				
1IB14050	R1/4-19f	M10X1	14	29	7	14				
1IB19050	R1/4-19f	M14X1.5	14	33	7	19				
1IB21060	R1/4-19f	M16X1.5	14	34,5	7	22				
1IB23090	R1/4-19f	M18X1.5	14	35	7	24				
1IB26100	R1/4-19f	M22X1.5	14	38	7	30				
1IB19080	R3/8-19f	M14X1.5	15	33	10	19				
1IB21090	R3/8-19f	M16X1.5	15	34	10	22				
1JB22100	R3/8-19f	M18X1.5 (1)	15	34,5	10	24				
1IB26110	R3/8-19f	M22X1.5	15	37,5	10	27				
1IB22120	R1/2-14f (C)	M14X1.5	19	27	12,4	22				
1IB22130	R1/2-14f (C)	M16X1.5	19	27	13	22				
1JB22140	R1/2-14f	M18X1.5 (1)	19	37,5	12	24				
1IB26150	R1/2-14f	M22X1.5	19	41	13	27				

(C) Concentrique. (1) FARM.