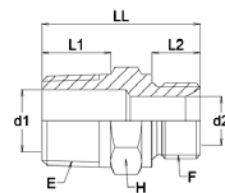
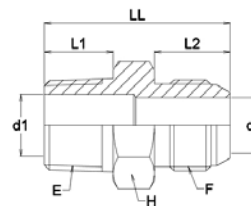
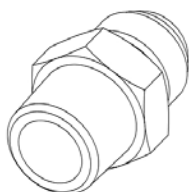


Adapteur droit Mâle GAZ Conique X Mâle DIN pour bague BS

S MR X MDINBS

PT162	R (E)	DINBS (F)	L1	L2	LL	d1	d2	H		
1BM14050	R1/8-28f	M10X1	10	8	26,5	4,5	3	14		
1BM16055	R1/8-28f	M12X1.5	10	10	29	4	4	17		
1BM16060	R1/4-19f	M12X1.5	14	10	33	7	4	17		
1BM19064	R1/4-19f	M14X1.5	14	12	36	6	6	19		
1BM21065	R1/4-19f	M16X1.5	14	12	36	7	7	22		
1BM23090	R1/4-19f	M18X1.5	14	12	36,5	7	10	24		
1BM19066	R3/8-19f	M14X1.5	15	12	37	10	6	19		
1BM21070	R3/8-19f	M16X1.5	15	12	37	8	8	22		
1BM23100	R3/8-19f	M18X1.5	15	12	37,5	10	10	24		
1BM27100	R3/8-19f	M22X1.5	15	14	41	10	14,1	27		
1BM22080	R1/2-14f	M16X1.5	19	12	41	13	8	22		
1BM23110	R1/2-14f	M18X1.5	19	12	41,5	13	10	24		
1BM27110	R1/2-14f	M22X1.5	19	14	45	13	14,1	27		
1BM27120	R3/4-14f	M22X1.5	20	14	46	18	14,1	27		
1BM36230	R1"-11f	M30X1.5	24	16	53	24	19	36		
1BM45240	R1"-11f	M38X1.5	24	18	57	24	24	46		
1BM55270	R1"1/4-11f	M45X1.5	25	20	63	31	31	55		
1BM60280	R1"1/2-11f	M52X1.5	25	22	65	38	38	60		

Adapteur droit Mâle GAZ Conique X Mâle Komatsu

S MR X MKOM

PT427	R (E)	KOM (F)	L1	L2	LL	d1	d2	H		
1JP17020	R1/4-19f	M14X1.5	14,5	17	37,5	5,8	4,8	14		
1JP19030	R3/8-19f	M16X1.5	15	18	39	9	7,5	19		
1JP19040	R3/8-19f	M18X1.5	15	18	39	9	9	19		
1JP24050	R1/2-14f	M22X1.5	20	20	48	12	10,3	24		
1JP27060	R1/2-14f	M24X1.5	20	21,5	52	12	13	27		
1JP32070	R3/4-14f	M30X1.5	20	26	57	17	17	32		
1JP36080	R1"-11f	M33X1.5	25,5	30	66,5	22,5	19	36		